



SHOWER BODY REBUILDING KIT


100-03004 American Standard Heritage 2 Valve Rebuilding Kit
100-03006 American Standard Heritage 3 Valve Rebuilding Kit

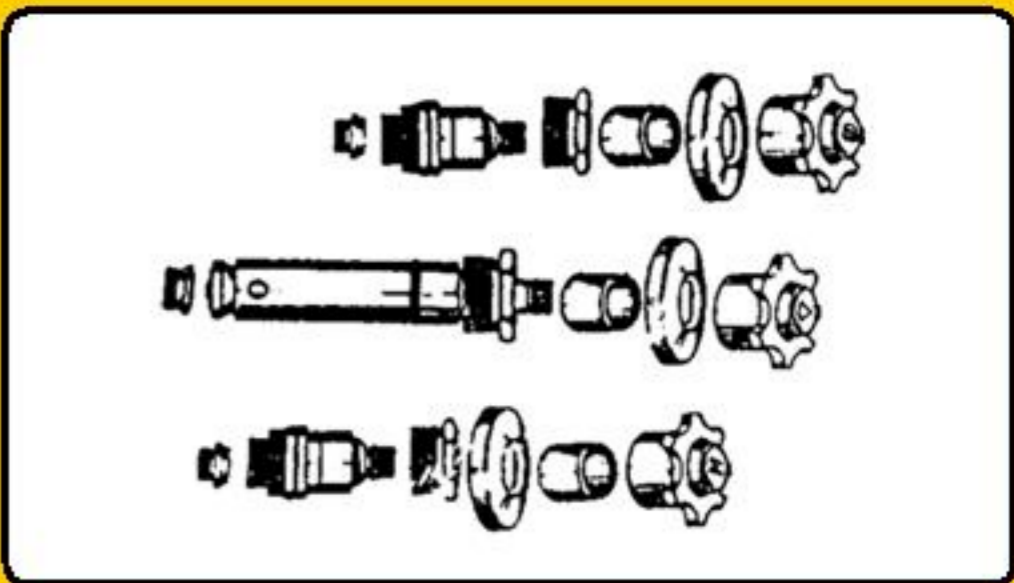


100-05004 Central 2 Valve Rebuilding Kit - Old Style
100-05006 Central 3 Valve Rebuilding Kit - Old Style

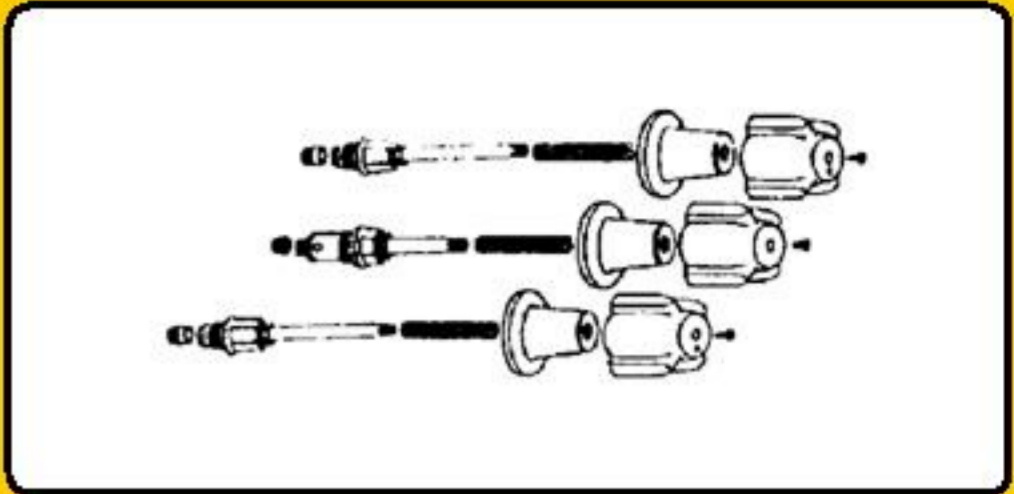


100-05014 Central 2 Valve Rebuilding Kit - Newer Style
100-05016 Central 3 Valve Rebuilding Kit - Newer Style

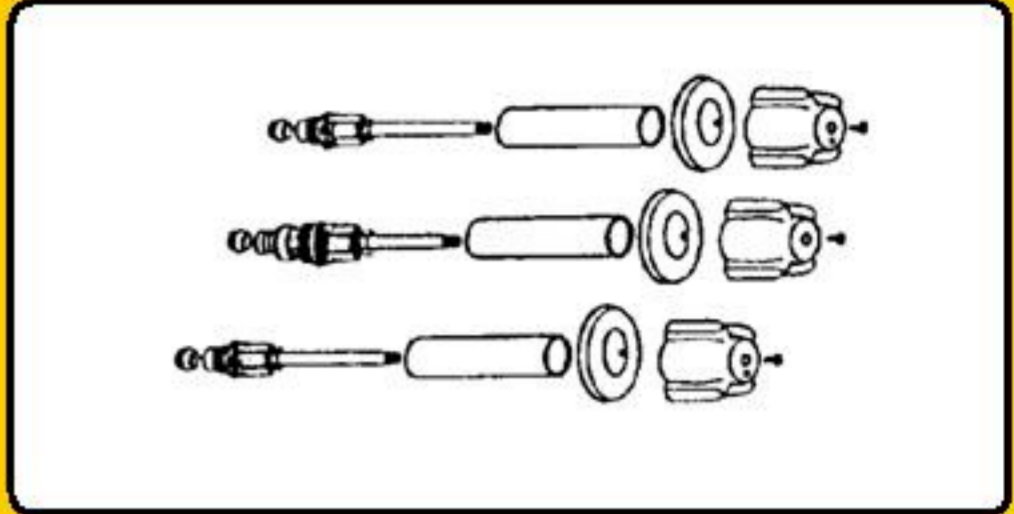


100-12014 Gerber 2 Valve Rebuilding Kit - New Style
100-12016 Gerber 3 Valve Rebuilding Kit - New Style

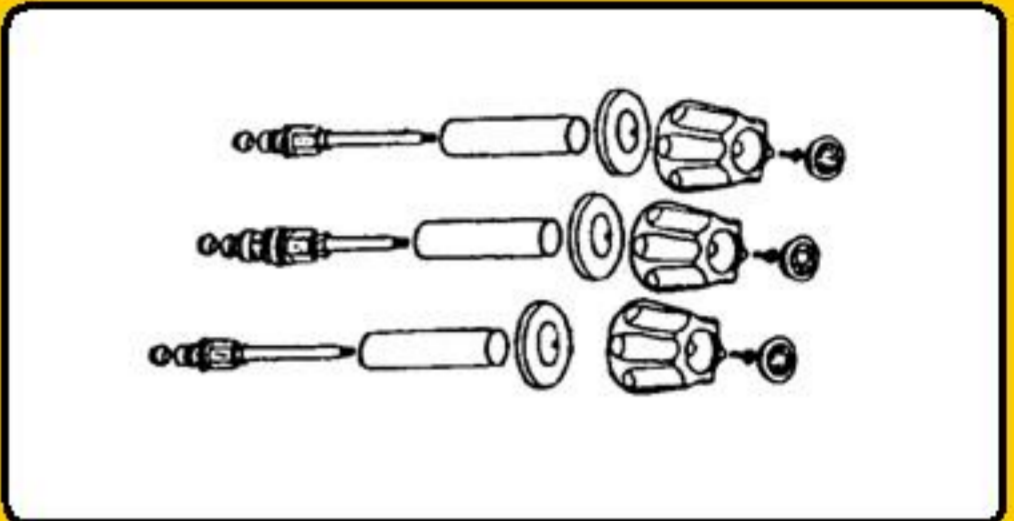


100-05504 Kohler Trend 2 Valve Rebuilding Kit
100-05506 Kohler Trend 3 Valve Rebuilding Kit

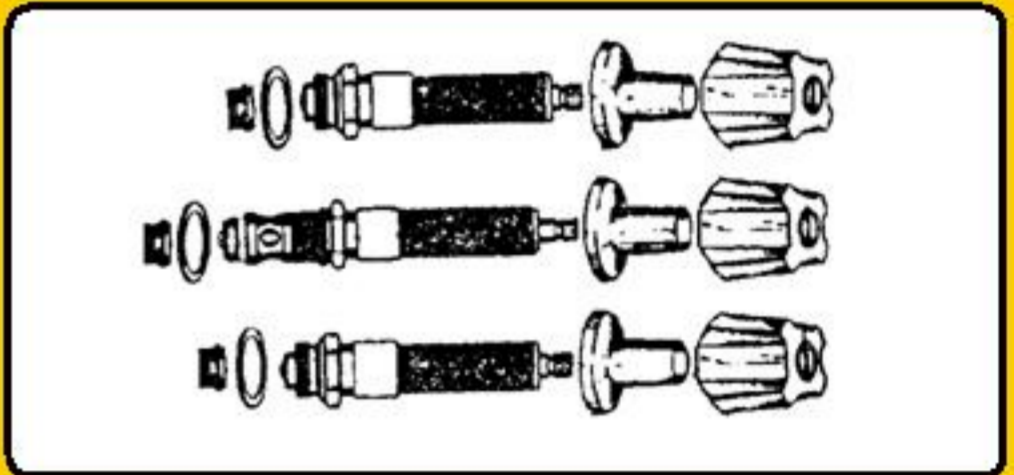


100-02004 Price Pfister 2 Valve Rebuilding Kit
100-02506 Price Pfister 3 Valve Rebuilding Kit

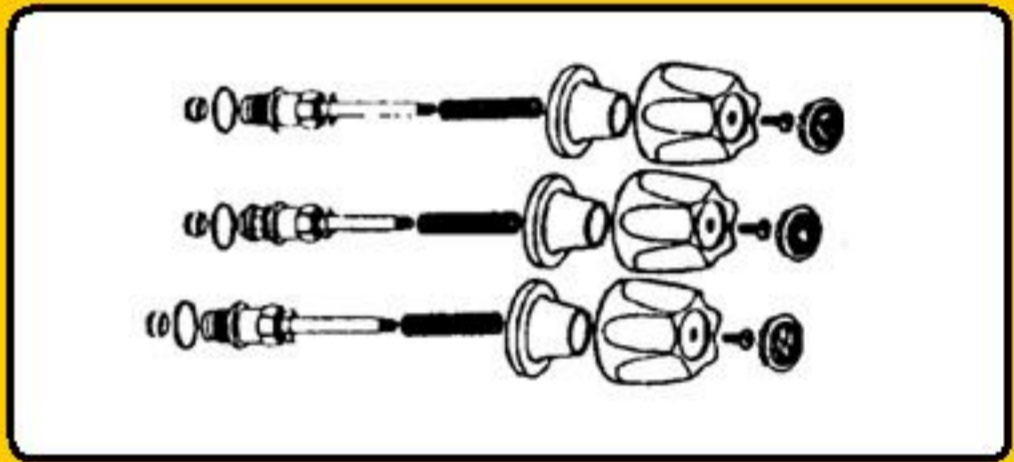

100-09504 Savoy 2 Valve Rebuilding Kit (010-0901 S/B unit included)
100-09546 Savoy 2 Valve Rebuilding Kit (009-0946 S/B unit included)
100-09547 Savoy 3 Valve Rebuilding Kit (011-0947 div unit included)
100-09557 Savoy 3 Valve Rebuilding Kit (010-0957 div unit included)
100-09516 Savoy 3 Valve Rebuilding Kit (soft seat 16T diverter)
100-09520 Savoy 3 Valve Rebuilding Kit (soft seat 20T diverter)

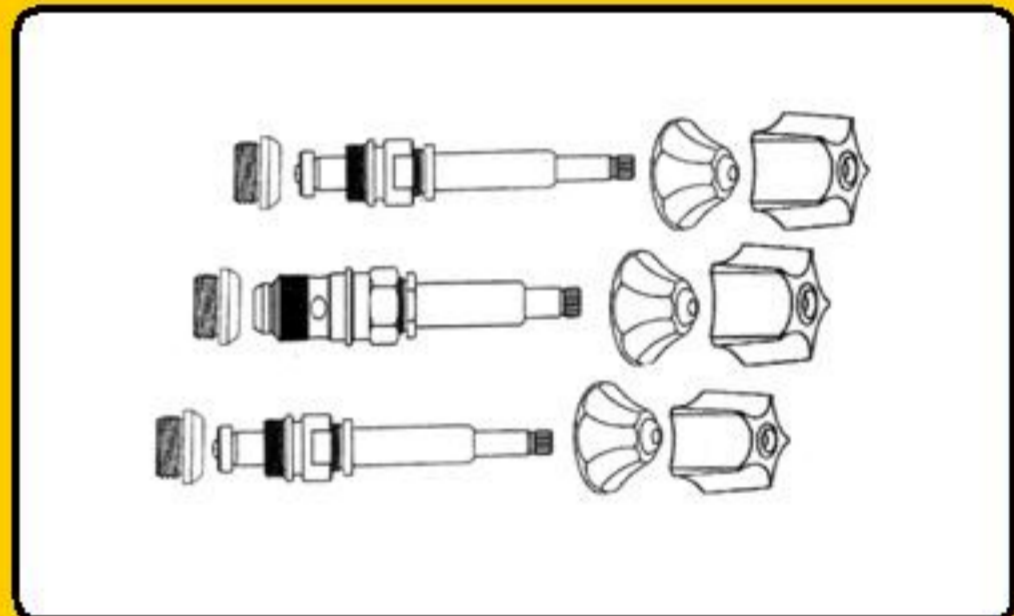

100-12504 Sayco 2 Valve Rebuilding Kit
100-12506 Sayco 3 Valve Rebuilding Kit

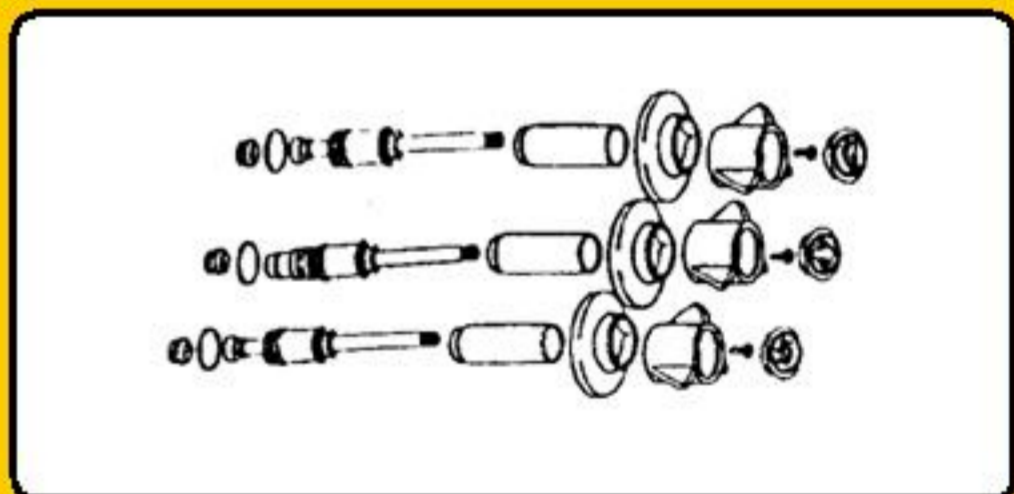

100-04004 Sterling 2 Valve Rebuilding Kit
100-04006 Sterling 3 Valve Rebuilding Kit

